



Y11500602001-B

Lista parametri
armadi 07 B
- XW70LR -

20/03/2019



Cod.	Range	Set value	Description	Function
set	LS ÷ US	-18,0	Set point	User setting of the operation temperature
Hy	0.1 ÷ 25.5	3,6	Differential	Temperature differential from set point for On/Off compressor
LS	-50 ÷ set	-22	Minimum set point	Sets the minimum value for the set point
US	set ÷ 110	-10	Maximum set point	Set the maximum value for set point
ot	-12.0 ÷ 12.0	0	Thermostat probe calibration	Allows to adjust possible offset of the thermostat probe
P2P	n ÷ y	y	Evaporator probe presence	n = not present: the defrost stops by time; y = present: the defrost stops by temperature
oE	-12.0 ÷ 12.0	0	Evaporator probe calibration	Allows to adjust possible offset of the evaporator probe
OdS	0 ÷ 255	1	Outputs delay at start up	This function inhibits any output activation for the period of time set in the parameter
AC	0 ÷ 30	3	Anti-short cycle delay	Minimum interval between the compressor stop and the following restart
CCt	0 ÷ 23.50	0.0	Continuous cycle duration	Allows to set the length of the continuous cycle: compressor stays on without interruption for the CCt time
CCS	-55 / +55°C	-18	Set point for continuous cycle	It sets the set point used during the continuous cycle
Con	0 ÷ 255	15	Compressor ON time with faulty probe	Time during which the compressor is active in case of faulty thermostat probe
CoF	0 ÷ 255	20	Compressor OFF time with faulty probe	Time during which the compressor is OFF in case of faulty thermostat probe
CF	°C / °F	°C	Temperature measurement unit	°C=Celsius; °F=Fahrenheit
rES	in / de	de	Resolution	(in = 1°C; dE = 0.1 °C) Allows decimal point display
Lod	P1 ÷ 1r2	P1	Probe displayed	(P1; P2): it selects which probe is displayed by the instrument: P1=Room probe; P2=Evaporator probe
dly	0 ÷ 20 min	20	Display temperature delay	(0 ÷ 20.0m; resul. 10s) when the temperature increases, the display is updated of 1 °C/1°F after this time
tdF	EL / in	in	Defrost type	EL = electrical heater; in = hot gas
dtE	-50 ÷ 110	10	Defrost termination temperature	It sets the temperature measured by the evaporator probe (P2), which causes the end of defrost
IdF	1 ÷ 120	6	Interval between defrost cycles	Determines the time interval between the beginning of two defrost cycles
MdF	0 ÷ 255	10	Maximum length for defrost	It sets the maximum length for defrost
dSd	0 ÷ 99	0	Start defrost delay	This is useful when different defrost start times are necessary to avoid overloading the plant
StC	0 ÷ 15 (min.)	0	Drain heater starting before defrosting cycle	Drain heater starting before defrosting cycle
dFd	rt ÷ dEG	Set	Displaying during defrost	rt = real temperature; it = temperature at defrost start; SET = set point temperature; dEF = "dEF" label
dAd	0 ÷ 255	30	MAX display delay after defrost	Sets the maximum time between the end of defrost and the restarting of the real room temperature display
Fdt	0 ÷ 60	5	Draining time	Time interval after the end of defrost, before the restoring of the control's normal operation
dPo	n ÷ y	n	First defrost after start-up	(y = immediately; n = after the IdF time)
dAF	0 ÷ 23.50	1.0	Defrost delay after fast freezing	Time interval between the end of the fast freezing cycle and the following defrost related to it
FnC	C-n ÷ O-y	C - n	Fan operating mode	C-n= runs with the compressor, OFF during defrost; o-n = continuous mode, OFF during defrost; C-Y = runs with the compressor, ON during defrost; o-Y = continuous mode, ON during defrost;
Fnd	0 ÷ 255	4	Fan delay after defrost	Interval between end of defrost and evaporator fans start (minutes)
Fno	0 ÷ 255 (sec.)	15	Fan delay at each start	Fan delay at each start (second)
Fct	0 ÷ 50°C	0	Differential of temp. for activation of fans	(Fct=0 function disabled)
FSt	-50 ÷ 50	-10	Fan stop temperature	Setting of temperature, detected by evaporator probe, above which fans are always OFF
Fon	0÷15 (min.)	1	Fan on time with compressor off	With Fnc=C_n or C_y, (fan activated in parallel with compressor). it sets the evaporator fan ON/OFF cycling time when the compressor is off. With Fon=0 and FoF=0 the fan are always off
FoF	0÷15 (min.)	3	Fan off time with compressor off	
FSU	Std Fon FOF	Std	Fan operating mode	Std : standard working, according to Fnc FoF : by pushing the DOWN key for 3s the fan are enabled/disabled. Fon : with Fnc= C-n or C-y by pushing the DOWN key for 3s the fan passes from in parallel to the compressor to in continuous mode
ALC	rE / Ab	rE	Temperat. alarms configuration	Alarm temperature is given by the ALL or ALU values. rE=temperature alarms are referred to the set point
ALU	-50 ÷ 110	15	Maximum temperature alarm	When this temperature is reached the alarm is enabled, after the "ALd" delay time
ALL	-50 ÷ 110	8	Minimum temperature alarm	When this temperature is reached the alarm is enabled, after the "ALd" delay time
ALd	0 ÷ 255	10	Temperature alarm delay	Time interval between the detection of an alarm condition and alarm signalling
dAo	0 ÷ 23.50	10.0	Delay of temperature alarm at start up	Time interval between the detection of the temperature alarm condition after instrument power on
OA4		Het	Fifth relay configuration	Configuration ouDEF, FAn: do not select it!. ALr: alarm; Lig: light; AUS: Auxiliary relay; onF: always on with instrument on; db= neutral zone; cP2 = second compressor; dEFZ: do not select it!; HES: night blindput function Aux4 (Het=delay of defrost during the draining)
i1P	CL ÷ OP	CL	Digital input polarity (13-14)	oP : digital input is activated by opening the contact; CL : digital input is activated by closing the contact
i1F	EAL ÷ dor	dor	Digital input 1 configuration (13-14)	EAL= external alarm: "EA" message is displayed; bAL= serious alarm "CA" message is displayed. PAL= pressure switch alarm, "CA" message is displayed; dor= door switch function; dEF= activation of a defrost cycle; AUS=not enabled; Htr= kind of action inversion (cooling - heating); FAn= not set it; ES= Energy saving; onF = to switch the controller off
did	0 ÷ 255	5	Digital input alarm delay (13-14)	Delay between the detection of the external alarm condition and its signalling
nPS	0 ÷ 15	0	Number of activation of pressure switch	Number of activation of the pressure switch, during the "did" interval, before signalling the alarm event
odc	FAn ÷ F_C	FAn	Compressor and fan status when open door	no = normal; Fan = Fan OFF; CPr = Compressor OFF; F_C = Compressor and fan OFF.
rrd	n - Y	n	Regulation restart with door open alarm	no= outputs not affected by the doA alarm; yES = outputs restart with the doA alarm
HES	-30°C÷30°C	0	Differential for Energy Saving	It sets the increasing value of the set point during the Energy Saving cycle
Loc	n - y	n	Enabling of keyboard lock	Enabling of keyboard lock
Adr	0÷247	-	Serial address	Identifies the instrument address when connected to a ModBUS compatible monitoring system
PbC	PtC - nTC	ntc	Kind of probe	It allows to set the kind of probe used by the instrument: PbC = PBC probe, ntc = NTC probe
dP1	-	-	Room probe display	
dP2	-	-	Evaporator probe display	
rSE	Valore set	-	Real set	It shows the set point used during the energy saving cycle or during the continuous cycle
rEL	-	-	Software release	For internal use
Ptb	-	-	Map code	For internal use